 





GETTING TO KNOW YOUR CAMERA

Front View

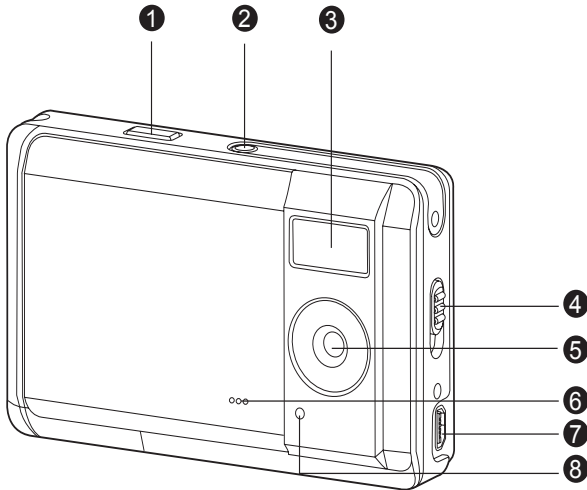

- 1. Shutter button
- 2. Power button
- 3. Flash
- 4. Focus switch
 - [] Normal mode
 - [] Macro mode
- 5. Lens
- 6. Beeper
- 7. USB connector
- 8. Self-timer LED

 Rear View

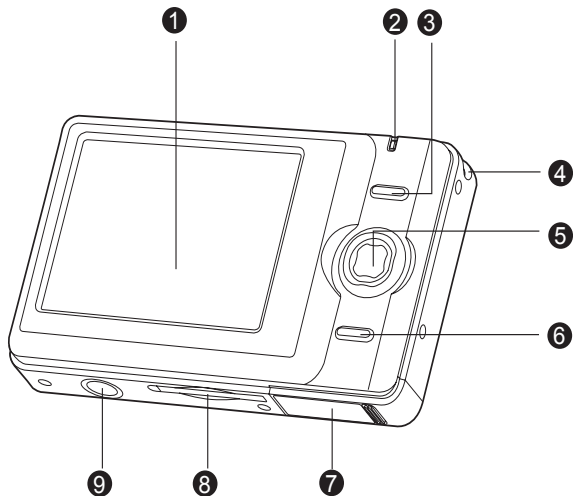

1. LCD monitor

2. Status LED

3. **OK** OK button
Q Digital Zoom button


4. Strap holder

5. 4-way control button
 - ▲ Up button
 - MENU** Menu button

 - ▶ Right button
 - ⚡ Flash button

 - ▼ Down button
 - MODE** Mode button

 - ◀ Left button
 - ⌚ Self-timer button

6.  Playback button

7. Battery cover




8. SD/SDHC memory card slot

9. Tripod socket

GETTING STARTED

Preparation

   
1. Attach the camera strap.
2. Open the battery cover.
3. Load the batteries with correct orientation as shown.
4. Close the battery cover and make sure it is locked securely.
5. Insert an SD/SDHC memory card (Optional).
 - The camera has 16MB internal memory (13.5MB available for image storage), but you can load an SD/SDHC memory card (SDHC memory card up to 4GB) to expand the camera's memory capacity.
 - Be sure to format the memory card with this camera before its initial usage.

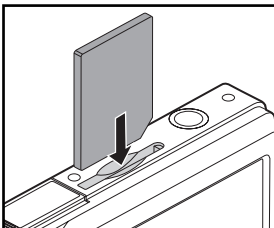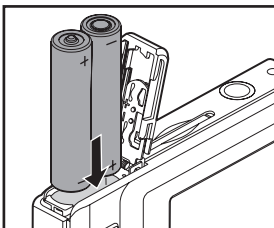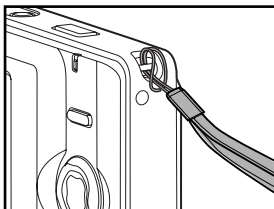

Turning the Power On/Off

Load the battery and insert an SD/SDHC memory card before starting.

 - Press the **POWER** button until the digital still camera turns on.
- To turn the power off, press the **POWER** button again.

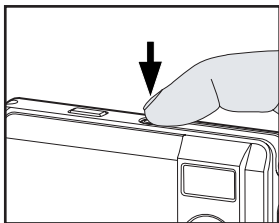







Capturing Images

Your camera is equipped with a 2.48" full color LTPS-TFT LCD monitor to help you compose images, playback recorded images/video clips or adjust menu settings.

1. Press the **Power** button to turn the power on.
2. Compose the image on the monitor screen so that the main subject is within the focus frame.
3. Press the shutter button to capture the image.

Setting the Scene Mode


You can select the scene mode according to the shooting scene. There are 6 available modes in this scene mode.

 
- [] Auto: Select this mode to adjust point-and-shoot action.
- [] Sport: Select this mode when you want to photograph fast-moving subjects.
- [] Night: Select this mode when you want to capture dark scenes such as night views.
- [] Portrait: Select this mode when you want to capture an image that makes the person stand out against a defocused (blurred) background.
- [] Landscape: Select this mode to capture an image with infinity focus, hard sharpness and high saturation.
- [] Backlight: Select this mode when you want to capture images as the light comes from behind the object.

1. Press the **MENU** button.
 - The [Capture] menu is displayed.
2. Select [Scene Mode] with the **▲ / ▼** buttons, then press the **OK** button.
3. Select the desired scene mode with the **▲ / ▼** buttons, then press the **OK** button.
4. To exit from the menu, press the **◀** button.

Recording Video Clips


This mode allows you to record video clips at a resolution of VGA (640 x 480) / QVGA (320 x 240) pixels.

1. Press the **MODE** button to set the camera mode to [].
2. Compose the image.
3. Press the shutter button.
 - The recording of the video clip will start.
 - Pressing the shutter button one more time will end the recording of the video clip.
 - The recording time depends on the storage size and the subject of the image to be recorded.

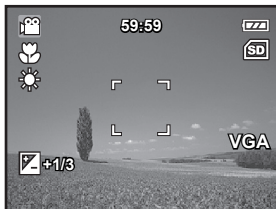

Playing Back Video Clips



You can play back recorded video clips on the camera.

 
1. Press the [] button.
 - The last image appears on the screen.
2. Select the desired video clip with the ◀ / ▶ buttons.
3. Press the **OK** button.
 - A press of the ▶ / ◀ buttons during playback allows fast forward play / fast reverse play.
 - To stop video playback, press the ▼ button. This stops playback and returns to the start of the video clip.
 - To pause video playback, press the **OK** button. This pauses video playback. To cancel pause, press the **OK** button again.



Playing Back Still Images


You can play back the still images on the LCD monitor.




1. Press the [] button.
 - The last image appears on the screen.
2. The images can be displayed in reverse or forward sequence with the ◀ / ▶ buttons.
 - To view the previous image, press the ◀ button.
 - To view the next image, press the ▶ button.
3. Press the **OK** /  button to adjust the zoom ratio. The magnification factor is displayed on the LCD monitor.
4. To view different portion of the images, press the ▲ / ▼ / ◀ / ▶ button to adjust the display area.

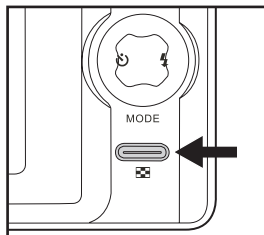

Erasing Images

Erasing single image / Erasing all images

   1. Press the [] button.
 - The last image will be displayed on the screen.
2. Select the image you want to erase with the ◀ / ▶ buttons.
3. Press the **MENU** button.
4. Select [Delete] with the ▲ / ▼ buttons and press the **OK** button.
5. Select [Single], [All], or [Select] with the ▲ / ▼ buttons, and press the **OK** button.
 - [Single]: Erases the selected image or the last image.
 - [All]: Erases all of the images except for the protected images.
 - [Select]: Select the image you want to erase in thumbnail mode.
6. Select [Execute] with the ▲ / ▼ buttons, and press the **OK** button.
 - To not erase, select [Cancel], and press the **OK** button.

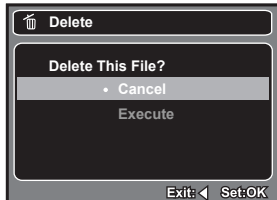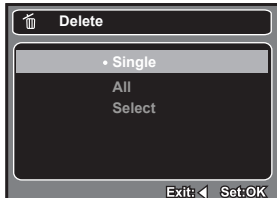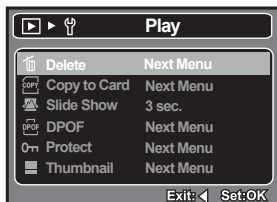


TRANSFERRING FILES TO YOUR COMPUTER

System Requirement

Windows	Macintosh
<ul style="list-style-type: none">■ Pentium 166 MHz or higher■ Windows 2000/XP/Vista■ 128MB RAM■ 128MB hard disk space■ CD-ROM drive■ Available USB port	<ul style="list-style-type: none">■ PowerPC G3/G4/G5■ OS 9.0 or later■ 128MB RAM■ 128MB hard disk space■ CD-ROM drive■ Available USB port

Downloading Your Files

 1. Connect one end of the USB cable to an available USB port on your computer.
2. Connect the other end of the USB cable to the USB terminal on the camera.
3. Select [PC] using the ▲ / ▼ buttons, and press the **OK** button.
4. From the Windows desktop, double click on “My Computer”.
5. Look for a new “removable disk” icon.
 - This “removable disk” is actually the memory (or memory card) in your camera. Typically, the camera will be assigned drive letter “e” or higher.
6. Double click on the removable disk and locate the DCIM folder.
7. Double click on the DCIM folder to open it to find more folders.
 - Your recorded images and video clips will be inside these folders.
8. Copy & Paste or Drag-N-Drop image and video files to a folder on your computer.

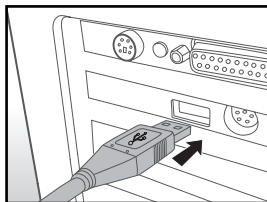

Mac users: Double-click the “untitled” or “unlabeled” disk drive icon on your desktop. iPhoto may automatically launch.